



PBS Vehicle Dimension Guide

Contents

Prime Mover & Truck Dimensions

Front Overhang – Single Steer Prime Mover

Front Overhang – Twin Steer Prime Mover

Wheelbase – Single Steer Tandem Drive

Wheelbase - Twin Steer Tandem Drive

Wheelbase – Single Steer Tri Drive

Wheelbase – Twin Steer Tri Drive

Fifth Wheel Offset

Fifth Wheel Height

Axle Spacings

Steer Axle Track Width

Drive Axle Track Width

Dual Tyre Spacings

Dolly Dimensions

Drawbar Length – Tri Axle Dolly

Dolly Fifth Wheel Offset – Tri Axle Dolly

Drawbar Length – Quad Axle Dolly (with rear steerable axle)

Dolly Fifth Wheel Offset – Quad Axle Dolly (with rear steerable axle)

Fifth Wheel Height

Axle Spacings

Track Width

Dual Tyre Spacings

Semi-Trailer Dimensions

Front Overhang

S-Dimension – Tri Axle

S-Dimension – Quad Axle (with rear steerable axle)

Front Point of Articulation to the Rear

Coupling Rear Overhang – Tri Axle

Coupling Rear Overhang – Quad Axle (with rear steerable axle)

Rear Overhang – Tri Axle

Rear Overhang – Quad Axle (with rear steerable axle)

Coupling Underrun

Drawbar Coupling Attachment Height – Fifth Wheel

Drawbar Coupling Attachment Height – Pin Type Coupling

Deck Height

Bin Height

Bottom Barrell Height

Top Barrel Height

Overall Height

Heaped Payload Height

Track Width

Dual Tyre Spacings

Combination Dimensions

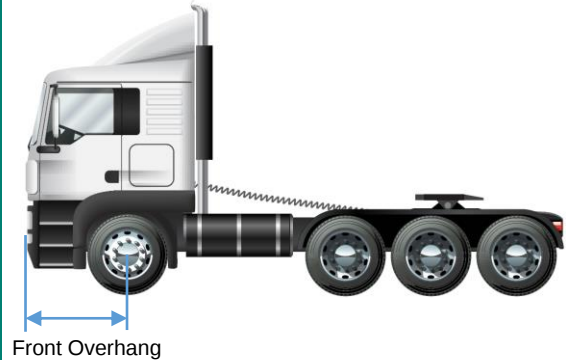
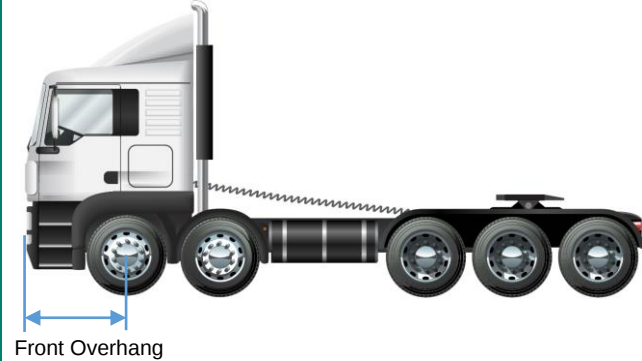
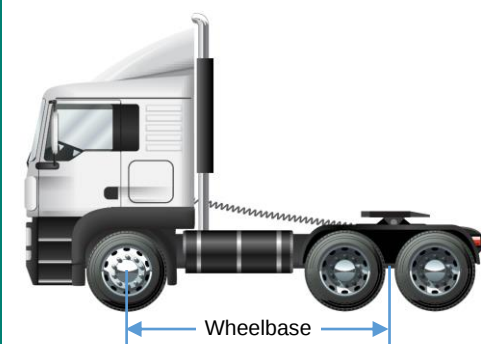
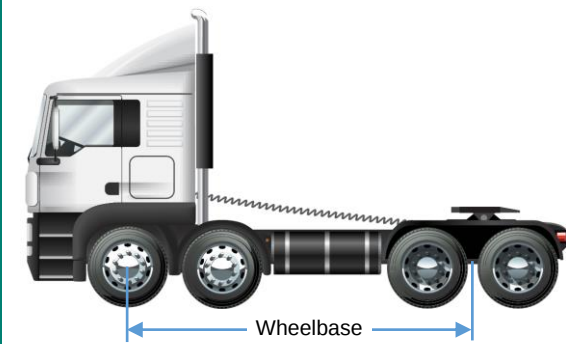
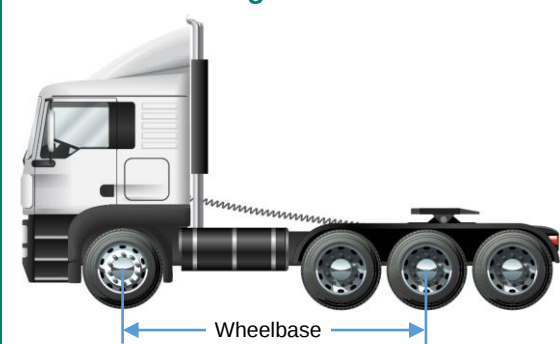
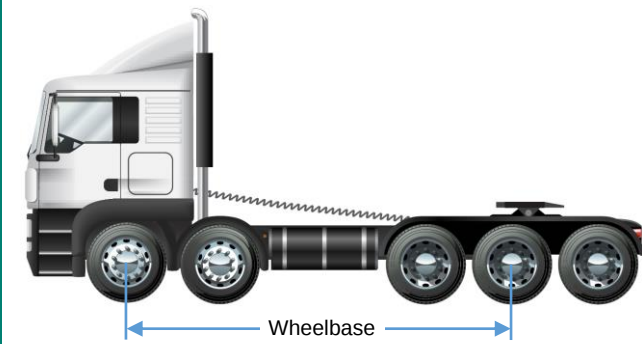
Axle Spacings

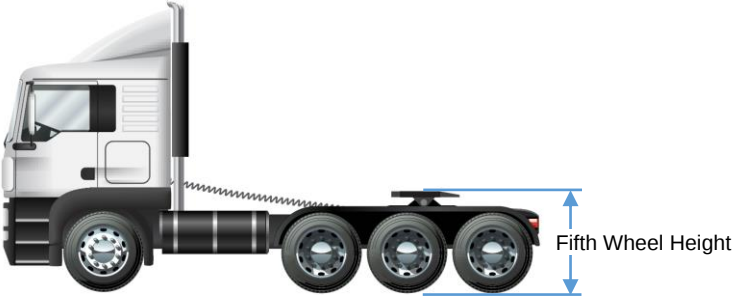
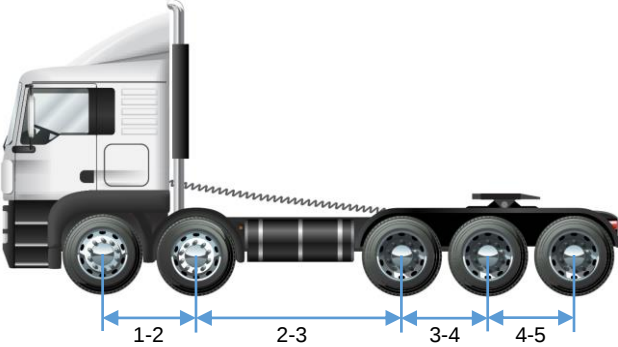
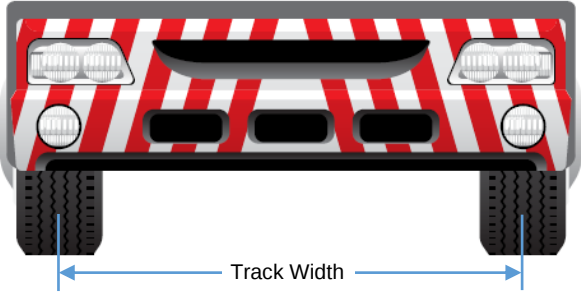
Inner to Inner Axle Spacings

Outer to Outer Axle Spacings

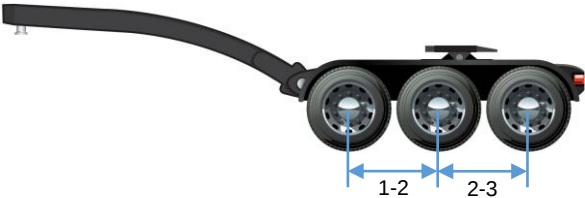
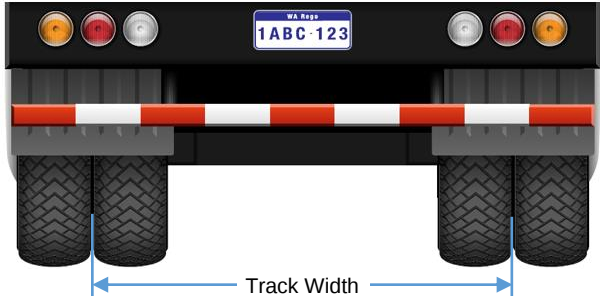
Overall Length

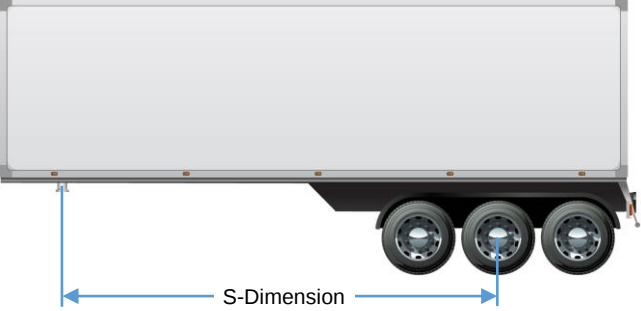
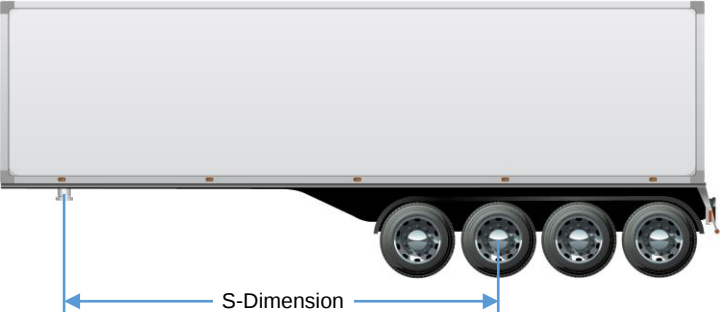
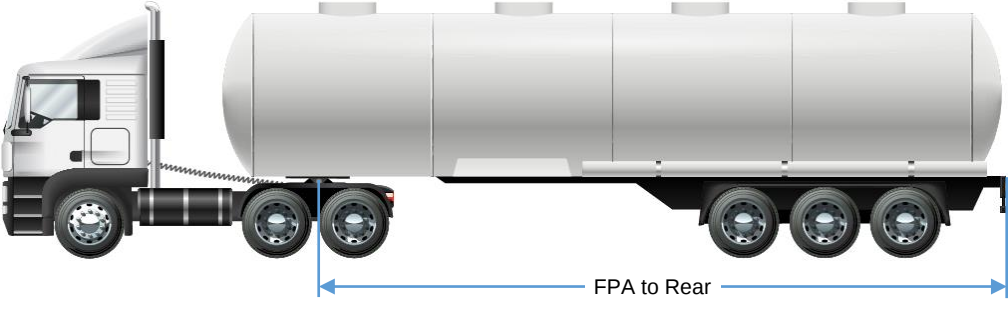
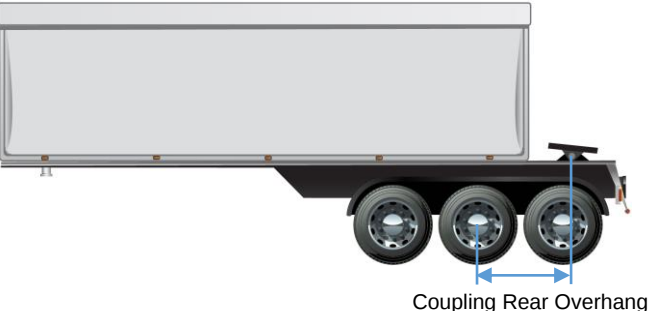
Clearance from Fifth Wheel (CFW)

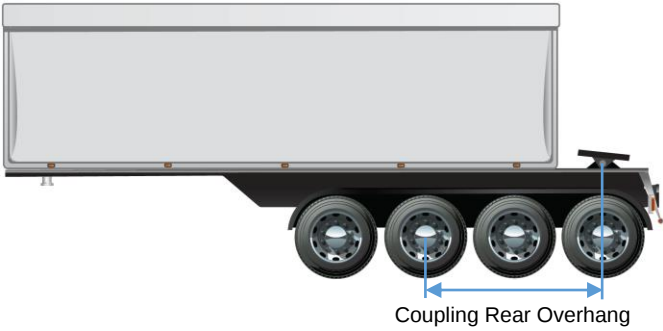
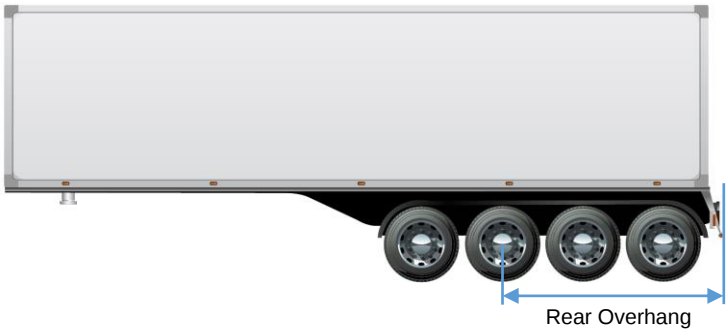
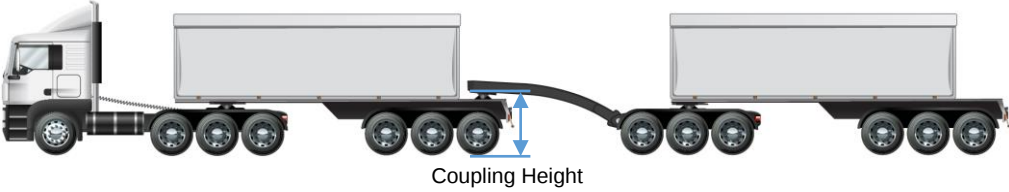
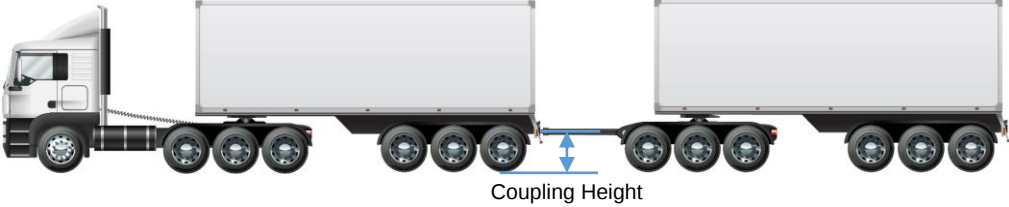
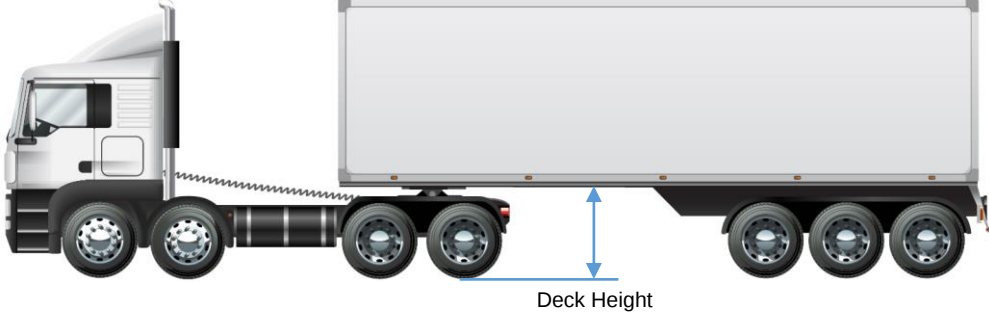
Prime Mover & Truck Dimensions			
Dimension	Description	Measure from	Measure to
Front Overhang – Single Steer Prime Mover  Front Overhang	The part of the prime mover or rigid truck forward of the centre of the steer axle. The front overhang influences the frontal swing.	Centre of steer axle.	Forwardmost part of prime mover or rigid truck.
Front Overhang – Twin Steer Prime Mover  Front Overhang	The part of the prime mover or rigid truck forward of the centre of the forwardmost steer axle. The front overhang influences the frontal swing.	Centre of front steer axle.	Forwardmost part of prime mover or rigid truck.
Wheelbase – Single Steer Tandem Drive  Wheelbase	The distance between the centre of the steer axle and the centre of the rear axle group. The wheelbase influences the swept path and mass distribution of the prime mover or rigid truck.	Centre of steer axle.	Centre of rear tandem axle group.
Wheelbase - Twin Steer Tandem Drive  Wheelbase	The distance between the centre of the forwardmost steer axle and the centre of the rear axle group. The wheelbase influences the swept path and mass distribution of the prime mover or rigid truck.	Centre of front steer axle.	Centre of rear tandem axle group.
Wheelbase – Single Steer Tri Drive  Wheelbase	The distance between the centre of the steer axle and the centre of the rear axle group. The wheelbase influences the swept path and mass distribution of the prime mover or rigid truck.	Centre of steer axle.	Centre of rear tri axle group.
Wheelbase – Twin Steer Tri Drive  Wheelbase	The distance between the centre of the forwardmost steer axle and the centre of the rear axle group. The wheelbase influences the swept path and mass distribution of the prime mover or rigid truck.	Centre of front steer axle.	Centre of rear tri axle group.

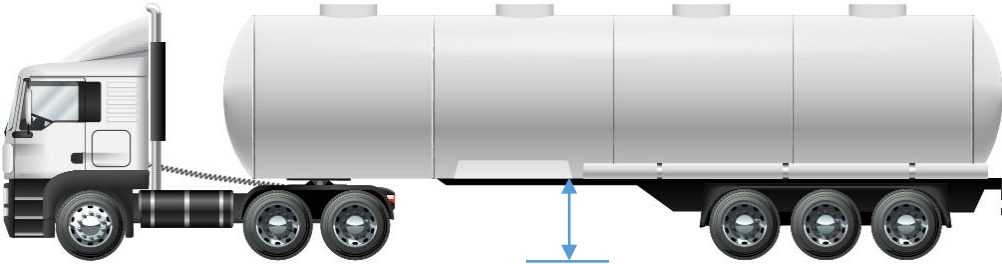
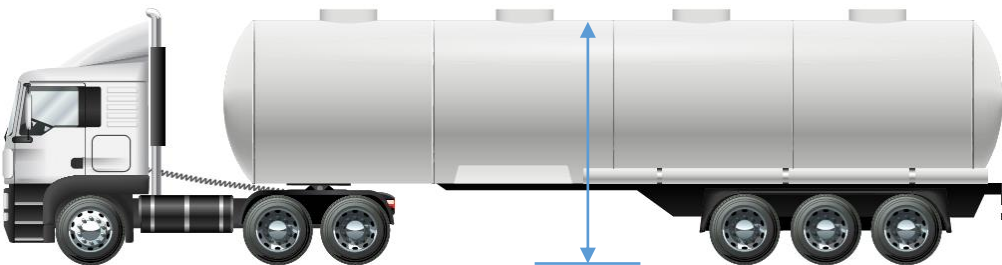
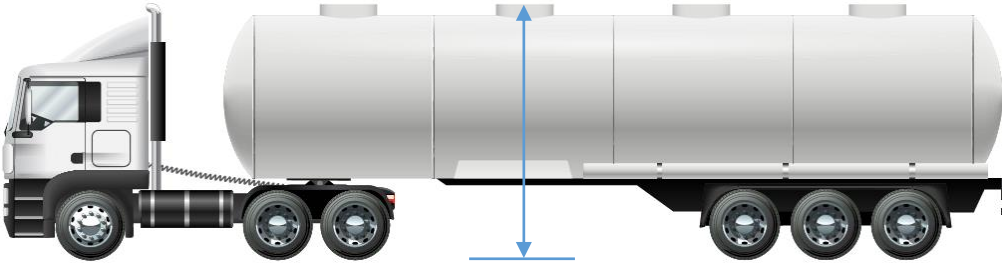
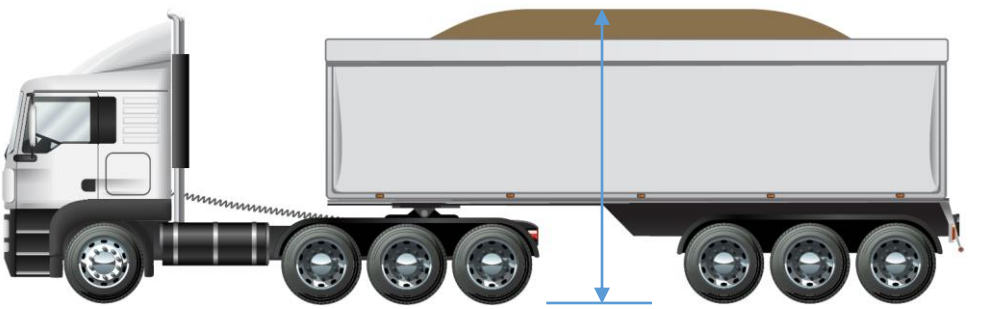
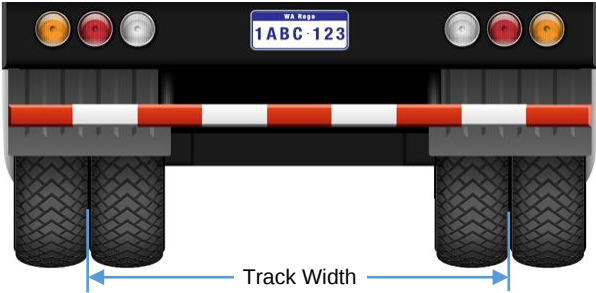
Fifth Wheel Offset  Fifth Wheel Offset	The fifth wheel offset is the distance the fifth wheel is from the centre of the rear axle group on the prime mover. The fifth wheel position influences mass distribution, swept path and high-speed stability.	Centre of drive axle group.	Fifth wheel pivot point.
Fifth Wheel Height  Fifth Wheel Height	Fifth wheel height is the distance from the ground to the top of the fifth wheel. Fifth wheel height influences the overall height, which effects the rollover stability.	Ground.	Top of fifth wheel coupling.
Axle Spacings  1-2 2-3 3-4 4-5	Axle spacings are measured between the centres of adjacent axles. Axle spacings influence vehicle stability, mass distribution, swept paths, as well as pavement and bridge damage.	Centre of axle.	Centre of adjacent axle.
Steer Axle Track Width  Track Width	Steer axle track width is the horizontal distance between the centres of the steer tyres. The steer axle track width influences vehicle stability.	Centre of left steer tyre.	Centre of right steer tyre.
Drive Axle Track Width  Track Width	Drive axle track width is the horizontal distance between the centres of the dual tyres on a drive axle. The drive axle track width influences vehicle stability.	Centre of dual tyres on left side of axle.	Centre of dual tyres on right side of axle.
Dual Tyre Spacings  Dual Tyre Spacing	Dual tyre spacing is the horizontal distance between the centres of adjacent tyres on one side of the axle. Dual tyre spacings influences vehicle stability.	Centre of inner tyre.	Centre of outer tyre.

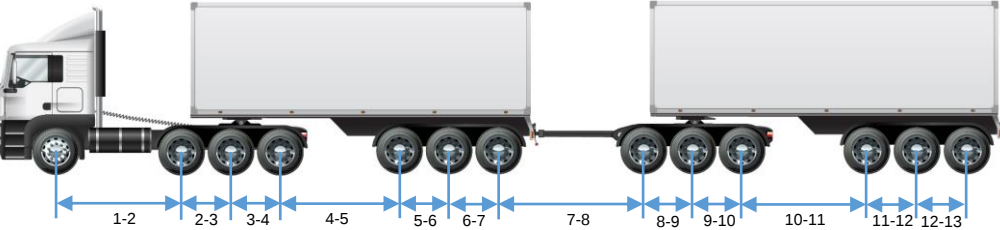
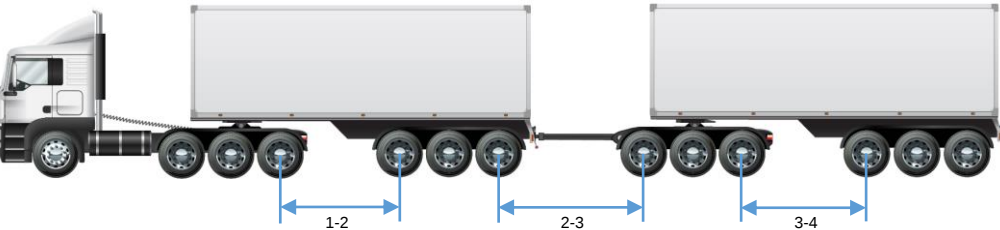
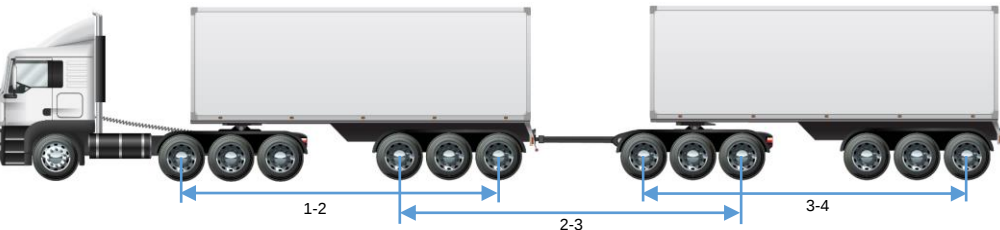
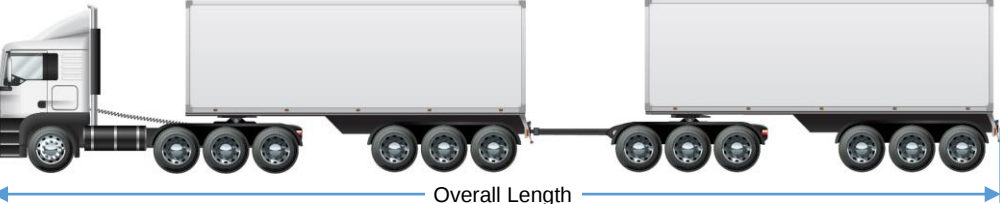
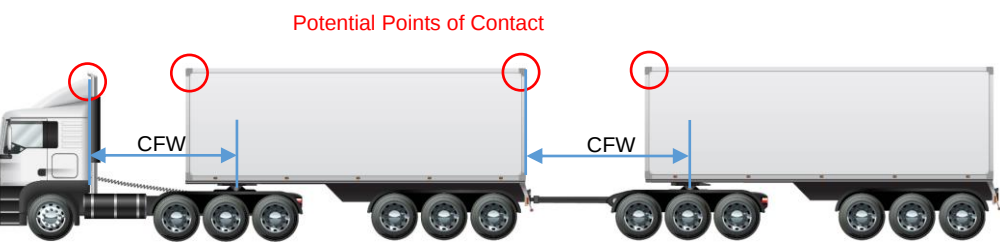
Dolly Dimensions

Dimension	Description	Measure from	Measure to
Drawbar Length – Tri Axle Dolly 	Drawbar length is the distance between the centre of the king pin or tow eye to the centre of the axle group on a dolly. Longer drawbars improve vehicle stability.	Centre of king pin or tow eye.	Centre of dolly axle group.
Dolly Fifth Wheel Offset – Tri Axle Dolly 	The fifth wheel offset is the distance the fifth wheel is from the centre of the dolly axle group. The fifth wheel position influences mass distribution, swept path and high-speed stability.	Centre of dolly axle group.	Fifth wheel pivot point.
Drawbar Length – Quad Axle Dolly (with rear steerable axle) 	Drawbar length is the distance between the centre of the king pin or tow eye to the centre of the axle group on a dolly. Longer drawbars improve vehicle stability.	Centre of king pin or tow eye.	Centre of dolly axle group. Note: on a quad axle group with a steerable axle, the steerable axle is disregarded, and the rear overhang line is the centre of the remaining axles.
Dolly Fifth Wheel Offset – Quad Axle Dolly (with rear steerable axle) 	The fifth wheel offset is the distance the fifth wheel is from the centre of the dolly axle group. The fifth wheel position influences mass distribution, swept path and high-speed stability.	Centre of dolly axle group. Note: on a quad axle group with a steerable axle, the steerable axle is disregarded, and the rear overhang line is the centre of the remaining axles.	Fifth wheel pivot point.
Fifth Wheel Height 	Fifth wheel height is the distance from the ground to the top of the fifth wheel. Fifth wheel height influences the overall height, which effects the rollover stability.	Ground.	Top of fifth wheel coupling.
Axle Spacings 	Axle spacings are measured between the centres of adjacent axles. Axle spacings influence vehicle stability, mass distribution, swept paths, as well as pavement and bridge damage.	Centre of axle.	Centre of adjacent axle.
Track Width 	Track width is the horizontal distance between the centres of the dual tyres on the dolly axles. Track width influences vehicle stability.	Centre of dual tyres on left side of axle.	Centre of dual tyres on right side of axle.

Dual Tyre Spacings 	Dual tyre spacing is the horizontal distance between the centres of adjacent tyres on one side of the axle. Dual tyre spacings influences vehicle stability.	Centre of inner tyre.	Centre of outer tyre.
Semi-Trailer Dimensions			
Dimension	Description	Measure from	Measure to
Front Overhang 	Front overhang is the distance forward of the articulation point (e.g. king pin). The front overhang is usually measured as a radius and influences the swept path.	Centre of king pin.	Forwardmost part of trailer. Fittings in the centre of the front of the trailer, such as hydraulic hoses that fit within the maximum radius, can be disregarded.
S-Dimension – Tri Axle 	S-dimension is the primary semi-trailer dimension and is the distance between the king pin and the centre of the rear axle group. S-dimension influences swept path and vehicle stability.	Centre of king pin.	Centre of tri axle group (rear overhang line).
S-Dimension – Quad Axle (with rear steerable axle) 	S-dimension is the primary semi-trailer dimension and is the distance between the king pin and the centre of the rear axle group. S-dimension influences swept path and vehicle stability.	Centre of king pin.	Rear overhang line. Note: on a quad axle group with a steerable axle, the steerable axle is disregarded, and the rear overhang line is the centre of the remaining axles.
Front Point of Articulation to the Rear 	The measurement from the king pin to the rear of the trailer influences swept path and vehicle stability.	Centre of king pin.	Rearmost part of trailer.
Coupling Rear Overhang – Tri Axle 	Coupling rear overhang is distance the rear coupling is from the centre of the rear axle group. Coupling overhang influences swept path and vehicle stability. The closer the coupling is to the centre of the axle group, the better the vehicle stability.	Centre of axle group (rear overhang line).	Coupling pivot point.

Coupling Rear Overhang – Quad Axle (with rear steerable axle)  Coupling Rear Overhang	Coupling rear overhang is distance the rear coupling is from the centre of the rear axle group. Coupling overhang influences swept path and vehicle stability. The closer the coupling is to the centre of the axle group, the better the vehicle stability.	Rear overhang line. Note: on a quad axle group with a steerable axle, the steerable axle is disregarded, and the rear overhang line is the centre of the remaining axles.	Coupling pivot point.
Rear Overhang – Tri Axle  Rear Overhang	Rear overhang is the distance from the centre of the rear axle group to the rearmost part of the trailer. Rear overhang influences swept path.	Centre of axle group (rear overhang line).	Rearmost part of trailer.
Rear Overhang – Quad Axle (with rear steerable axle)  Rear Overhang	Rear overhang is the distance from the centre of the rear axle group to the rearmost part of the trailer. Rear overhang influences swept path.	Rear overhang line. Note: on a quad axle group with a steerable axle, the steerable axle is disregarded, and the rear overhang line is the centre of the remaining axles.	Rearmost part of trailer.
Coupling Underrun  Coupling Underrun	Coupling underrun is the distance the rear coupling is forward of the rear of the trailer. It is referred to as underrun, as a conventional pin type coupling is typically located under the rear of the trailer.	Coupling pivot point.	Rearmost part of trailer.
Drawbar Coupling Attachment Height – Fifth Wheel  Coupling Height	Drawbar coupling attachment height is the distance from the ground to the drawbar coupling point.	Ground.	Top of rear fifth wheel coupling.
Drawbar Coupling Attachment Height – Pin Type Coupling  Coupling Height	Drawbar coupling attachment height is the distance from the ground to the drawbar coupling point.	Ground.	Centre of rear coupling pin.
Deck Height  Deck Height	Deck height is the distance from the ground to the underside of the trailer deck. Deck height influences the payload centre of gravity, which effects rollover stability.	Ground.	Underside of deck. Note: If the trailer is not level, this measurement is taken as an average by measuring the front, centre and rear.

Bin Height  Bin Height	Bin height is the distance from the ground to the top of the trailer bin. Bin height generally determines the maximum water level payload height.	Ground.	Top of bin. Note: Typically, the maximum bin height is taken at the highest point, however it can be taken as an average.
Bottom Barrell Height  Bottom Barrell Height	Bottom barrel height is the distance from the ground to the underside of the trailer barrel / tank. Bottom barrel height influences the payload centre of gravity, which effects rollover stability.	Ground.	Underside of barrel / tank. Note: If the trailer is not level, this measurement is taken as an average by measuring the front, centre and rear.
Top Barrel Height  Top Barrell Height	Top barrel height is the distance from the ground to the top of the trailer barrel / tank. Top barrel height influences the payload centre of gravity, which effects rollover stability.	Ground.	Top of barrel / tank. Note: If the trailer is not level, this measurement is taken as an average by measuring the front, centre and rear.
Overall Height  Overall Height	Overall height is the distance from the ground to the highest point on the trailer. Overall height influences the payload centre of gravity, which effects rollover stability.	Ground.	Highest part of trailer.
Heaped Payload Height  Heaped Payload Height	Heaped payload height is the highest point of a bulk payload that is heaped in the trailer. Heaped payload height influences the payload centre of gravity, which effects rollover stability.	Ground	Highest part of payload.
Track Width  Track Width	Track width is the horizontal distance between the centres of the dual tyres on the trailer axles. Track width influences vehicle stability.	Centre of dual tyres on left side of axle.	Centre of dual tyres on right side of axle.

Dual Tyre Spacings  Dual Tyre Spacing				Dual tyre spacing is the horizontal distance between the centres of adjacent tyres on one side of the axle. Dual tyre spacings influences vehicle stability.	Centre of inner tyre.	Centre of outer tyre.
Combination Dimensions						
Dimension				Description	Measure from	Measure to
Axle Spacings 				Axle spacings influence vehicle stability, mass distribution, swept paths, as well as pavement and bridge damage.	Centre of axle.	Centre of adjacent axle.
Inner to Inner Axle Spacings 				Axle spacings influence vehicle stability, mass distribution, swept paths, as well as pavement and bridge damage.	Centre of rearmost axle in the axle group.	Centre of forwardmost axle in the adjacent axle group.
Outer to Outer Axle Spacings 				Axle spacings influence vehicle stability, mass distribution, swept paths, as well as pavement and bridge damage.	Centre of the forwardmost axle in the axle group.	Centre of rearmost axle in the adjacent axle group.
Overall Length 				Overall length influences vehicle stability, swept path and level of access.	Forwardmost part of the vehicle combination.	Rearmost part of the vehicle combination.
Clearance from Fifth Wheel (CFW) 				This measurement is only required to determine trailer clearances using the Trailer Clearance Calculator.	The fifth wheel pivot point on the prime mover; Or The fifth wheel pivot point on the dolly.	The rear of the prime mover that will potentially contact the front of the lead trailer / load; Or The rear of the leading trailer or load that will potentially contact the following trailer / load.